

All Voters Can Use Accessible Voting Equipment

The AutoMARK can...

- Read a voter their ballot
- Make text bigger
- Change the contrast of the screen
- Warn a voter if they overvote or skip a contest



Answering Voter Questions

➔ What is the AutoMARK?

The AutoMARK is a machine that lets you make your choices on a touchscreen or with a keypad before printing your selections on your ballot.

➔ How does the AutoMARK help me?

This means you can review the candidates you select and correct any mistakes before your selections are printed.

Accessibility Basics

- Offer the AutoMARK to every voter.
- Give all voters courteous attention in exercising their right to vote.
- Remember, not all disabilities are visible. If an individual requests assistance, trust that it is necessary.
- Be considerate of the extra time it might take for a person with a disability or an elderly person to answer questions and get things done.

All Voters Can Use Accessible Voting Equipment

The table or stand the AutoMARK rests on must have...

- 30 in. wide entrance
- 27 in. of knee clearance
- 19 in. of toe clearance
- 28-34 in. tabletop height
- 30"x 48" clear space in front of the booth
- Privacy so no one can see how the voter is marking their ballot
- A chair nearby for voters who need it, but not blocking access for a voter using a wheelchair

When the polls open the AutoMARK must be...

- Set up
 - Tactile keypad and headphones plugged in and resting in front of the machine
- Turned on
 - At the screen where a voter can start their voting session
- Functioning
 - No error messages

A poll worker must be able to...

- Turn on AutoMARK and navigate to voting session
- Activate the correct ballot style if necessary
- Explain to a voter how to use the AutoMARK to cast their ballot including adding write-ins
- Change the ink cartridge

If you have questions about how to use the AutoMARK, talk to your clerk or chief inspector or reference the user manual.